

Side Winder Flange Spreader

Operating Instructions

(Patent pending)

Warning! Never place your fingers between pipe flanges.

1. Loosen and Remove Flange Bolt as needed to perform task.

2. Turn screw to left all the way. This will line up the tips.



3. Place tips of Flange Spreader between gap in flange.

4. Insert pin through restraint straps and Flange bolt holes.



5. Turn screw to right, keeping tips in gap until hand tight. Use an adjustable wrench to turn screw and continue spreading Flange faces.



Tool Care

1. Clean Tool after use.
2. Lubricate screw, washer, and travelers with Anti-Seize
3. Spray WD40 on Through Bolt

